1. Rails will need to be cut down to proper length after posts have been mounted. The drawing shows the approximate location.
2. Once cut, the lower rails will need to be drilled with a half inch bit for the rail locks.
3. The upper rails get top plates. There are stainless steel square drive screws provided.

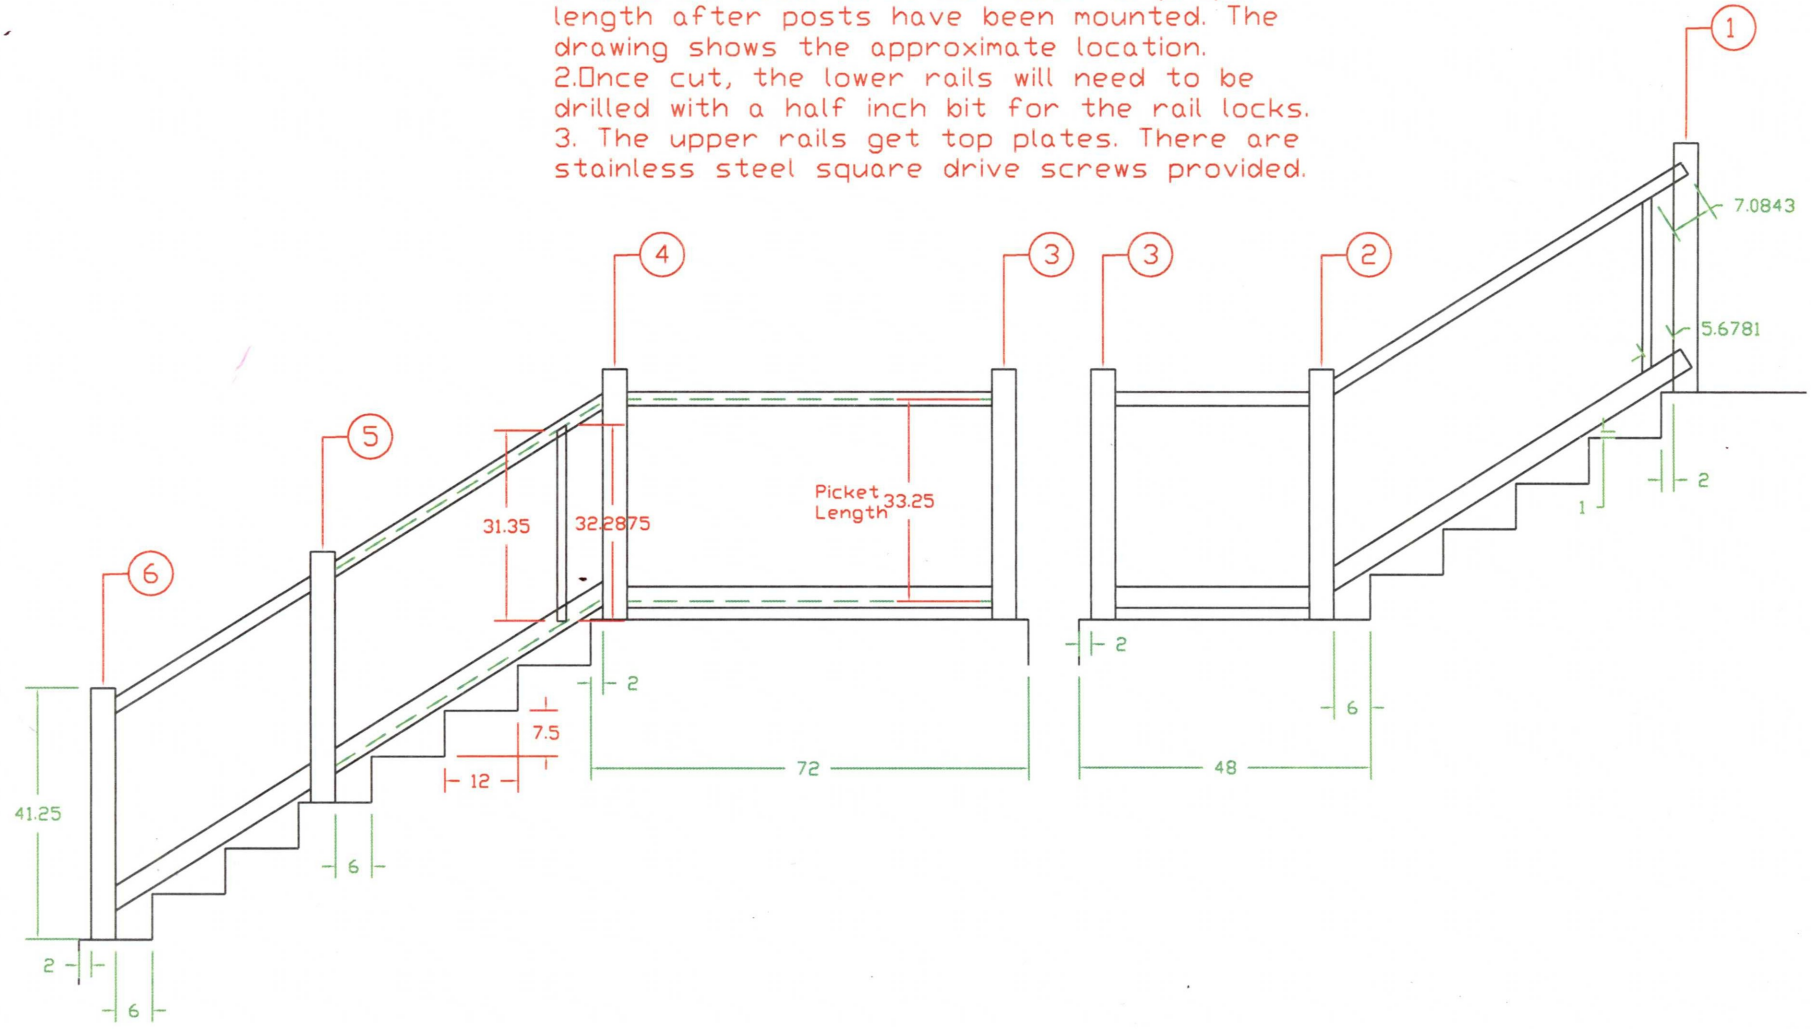

LOVEWELL FENCE & DECK

CUSTOMER NAME: Mr. Smith		DATE: 09-19-2009	DRAWN BY: SB
DRAWING NAME: Deck Layout		SCALE: NTS	REVISION: 001